



For Models 7015, 7016


FREDDY FENDERS SPEEDEZ XL INSTALLATION INSTRUCTIONS

- 1** A) Rigid Forks: Plug all holes in fender with rubber plugs provided.
B) Suspension Forks: To reduce fender vibration, thread a zip tie through the front two holes in the fender and over the fork bridge (for reverse fork bridges, use rear set of holes). Plug unused holes with rubber plugs provided.

- 3** Attach to brake bridge using plastic clip (snap on) and 27 mm bolt and lock nut.

If bridge has no hole or there is no bridge, use 2 zip ties going through channels in plastic clip then tighten around each seat stay.

CAUTION: Adjust overall position of fender before firmly tightening zip ties.

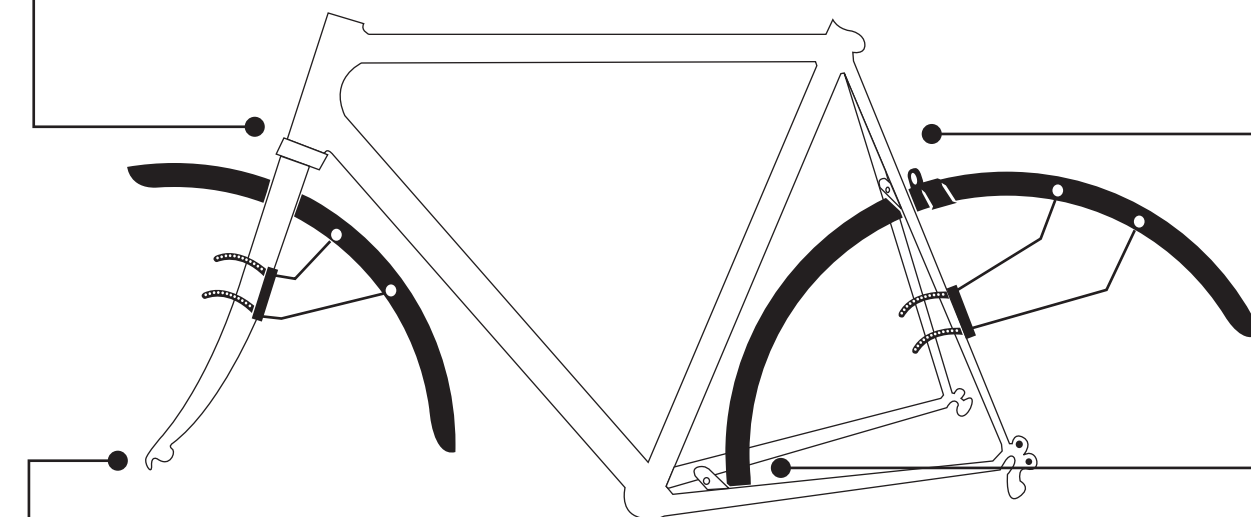

- 2** Position the fender snugly against the fork crown/ bridge. Then attach Speedez Quick Attach brackets to fork legs/ seat stays by wrapping rubber straps around fork leg/ seat stays and looping over bracket hooks. Be sure to pull firmly on straps for a secure fit. Slide adjustable stays through eyelet bolts/ nuts to conform fender to curvature of tire without rubbing. Tighten bolts.

- 4** Attach front end of fender to chain stay bridge or seat tube by threading a zip tie through hole in the bottom of fender and around the bridge or seat tube.

Note: For excess portion of rubber straps either:
A) Double over and loop onto outside hooks or,
B) Cut off excess making sure to leave enough strap for future removal and installation.

TIPS

- Snip ends off zip ties for neater look
- Toe clips may touch front fender during slow speed turns on some bikes
- Check nuts and bolts periodically.

- 5** To attach/adjust rear fender height, see step #2

